



EXPRESS NAIL


Mounting

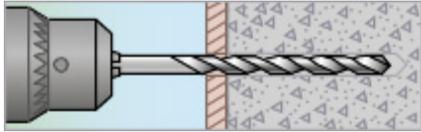

1. Drill the hole. Hole diameter is equal to the nail diameter.

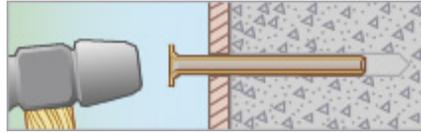

2. Knock in the nail.

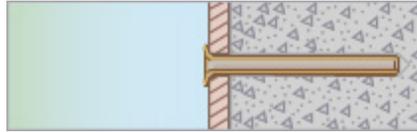

3. Installation is complete.